


MONITOR ARM: Quick Setup Guide

Attention: For more information and for safety instructions, please read and understand the manufacturer's setup guide.

Contents:

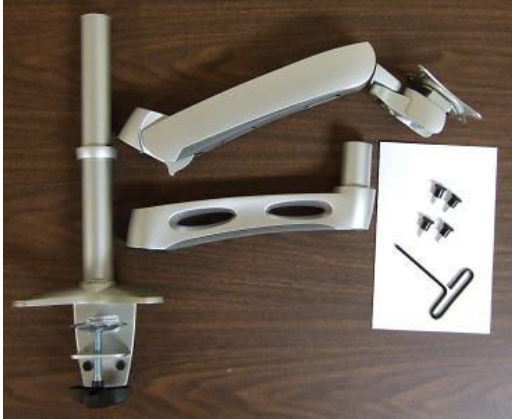

Step 1: Attach the table clamp firmly to the table.



Step 2: Insert the arm extension (optional).



Step 3 (optional): If your monitor has a detachable base, remove it according to the monitor user guide.



Step 4: Put the monitor on a flat surface (screen facing down) and screw the front piece of the monitor arm to the back of the monitor (thumbscrews enclosed).



Step 5: Carefully insert the front piece of the monitor arm into the monitor arm extension (or table clamp if the extension is not used).



OPTRON ASSISTIVE TECHNOLOGIES


Andreas Heim
P.O. Box 5454
Morton, IL 61550, USA

Phone & Fax: 1-309-694 2077
Toll Free: 1-888-5 OPTRON
(1-888-567 8766)

E-mail: info@optronusa.com
Web: www.optronusa.com

OPTRON 
Look at it.

Step 6: Connect the monitor cable and the power cable to the monitor.

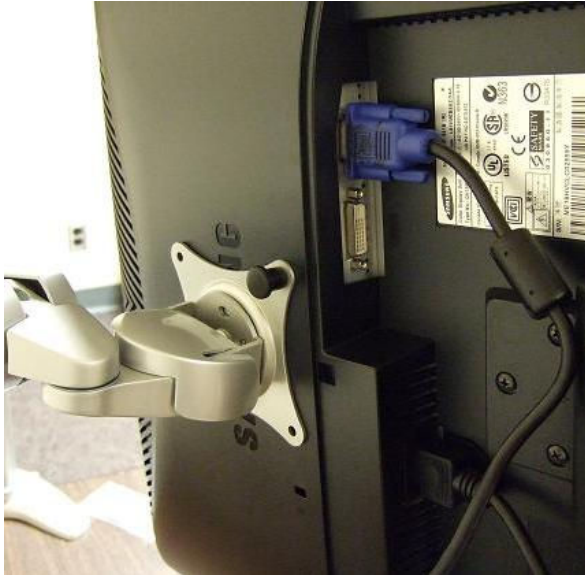

Step 7: Push the cables through the plastic cover on the bottom of the front piece of the monitor arm.




Adjustments:

Height adjustment tension
(Enclosed adjustment wrench, clockwise = tighter)



Tilt adjustment
(Phillips screwdriver, clockwise = tighter)

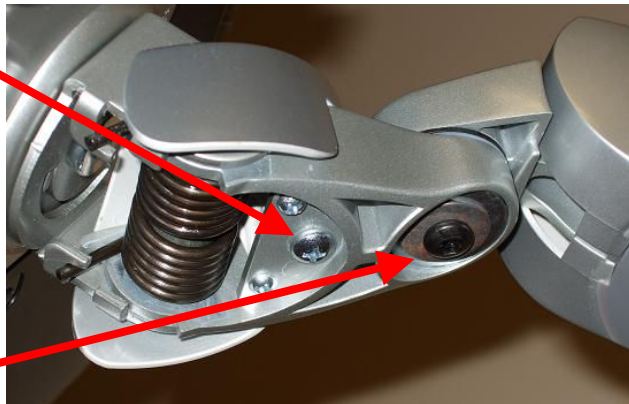

Horizontal rotation adjustment
(Enclosed adjustment wrench, clockwise = tighter)

OPTRON ASSISTIVE TECHNOLOGIES

Andreas Heim
P.O. Box 5454
Morton, IL 61550, USA

Phone & Fax: 1-309-694 2077
Toll Free: 1-888-5 OPTRON
(1-888-567 8766)

E-mail: info@optronusa.com
Web: www.optronusa.com

OPTRON 
Look at it.